












## FUNCTIONS


Function	Description	Display	Page
	<b>DATE</b> Perpetual date (leap year and month-end programmed up to 2099) with: day, weekday, calendar week, month, year.	Digital	2
	<b>T1</b> 1st time zone.	Hands and/or digital	3
	<b>T2</b> 2nd time zone.	Hands and/or digital	3
	<b>TIME SWAP</b> Option to select the time zone indicated by the hands.	Hands	3
	<b>ADD/SPLIT CHRONOGRAPH</b> Chronograph with split times, time addition and memory.	Digital	3
	<b>LAP CHRONOGRAPH</b> Chronograph with lap times and memory.	Digital	4
	<b>TIMER</b> Programmable countdown with acoustic or vibrating warning.	Digital	4
	<b>ALARM A1</b> Alarm for T1 with acoustic or vibrating warning.	Digital	5
	<b>ALARM A2</b> Alarm for T2 with acoustic or vibrating warning.	Digital	5
	<b>SET</b> Access to the watch parameters.	Digital	5

## SELECTING THE FUNCTIONS

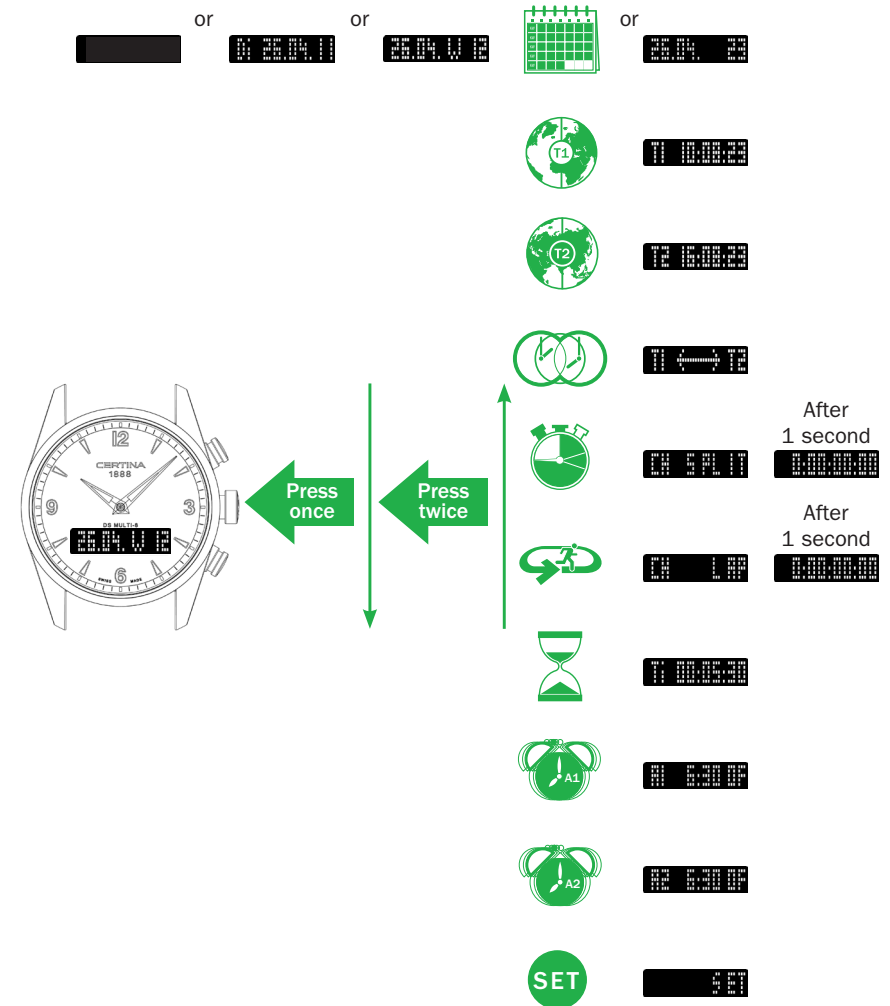


## BASICS

### DISPLAY BACKLIGHT

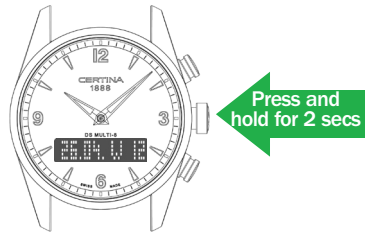

The display backlight goes out after 10 seconds if no push-buttons are pressed.

### USE

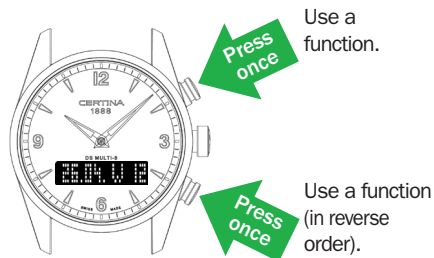


### SETTING



Activate the settings for a function or parameter.

The setting mode is deactivated after 15 seconds if no push-buttons are pressed.

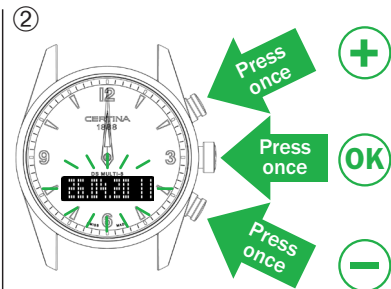

Set a parameter (+/-) and confirm (OK).

### EOL (End Of Life)



As the battery nears the end of its life, the watch will enter one of two states:

**EOL:** The watch continues to function. The alarm and timer vibrating warning switches to acoustic. The display backlight no longer functions and EOL is displayed regularly (flashing).

**Battery flat:** The watch enters SLEEP mode and can only be reactivated if the battery is replaced.


## DATE



### DISPLAY





### SETTINGS

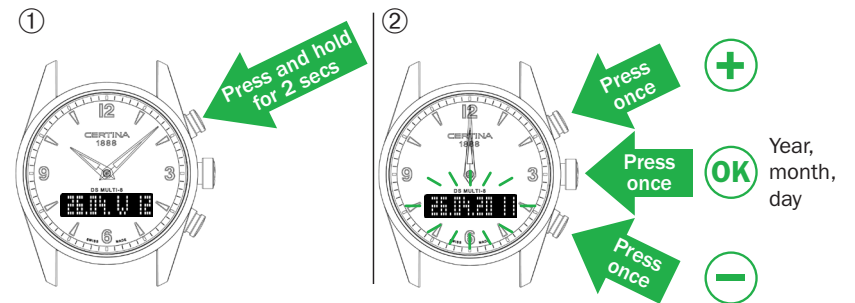

Note: The date cannot change if the hands are displaying T2. In this case, the display will indicate "NO SET" in step ①. To display T1 with the hands, see TIME SWAP


## T1 & T2 – 1st AND 2nd TIME ZONE

To set T1 or T2, the digital display must show T1 or T2 accordingly. T2 can only be adjusted by an hour and 15 minutes.

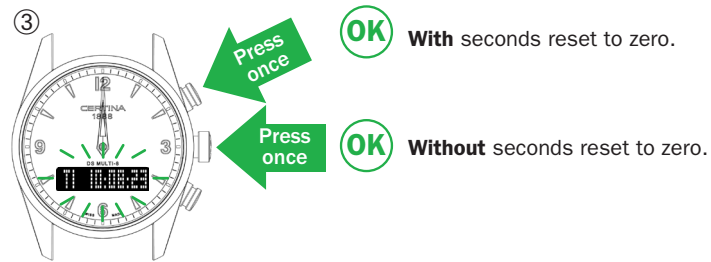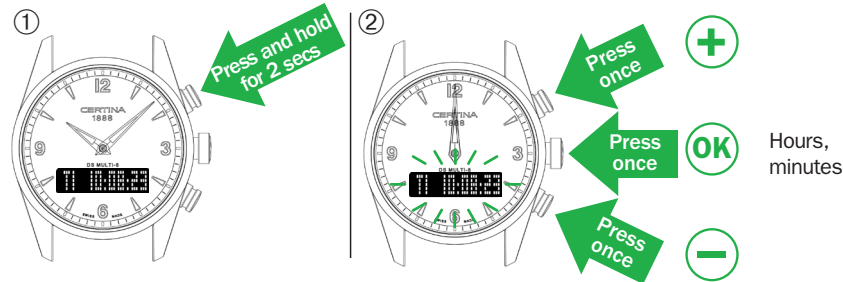




## TIME SWAP

To set a time difference between T1 and T2 using the date change calculation, the date (+/- 1 day) can be changed. If the user returns to the T1 display using the hands, the date is no longer required (difference stored).

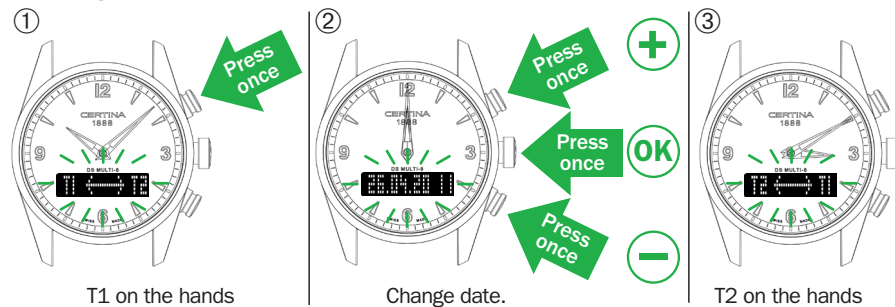

## ADD/SPLIT CHRONOGRAPH


A chronograph enabling times to be added and split times measured. The ADD and SPLIT functions can be combined. Up to 20 times can be stored.

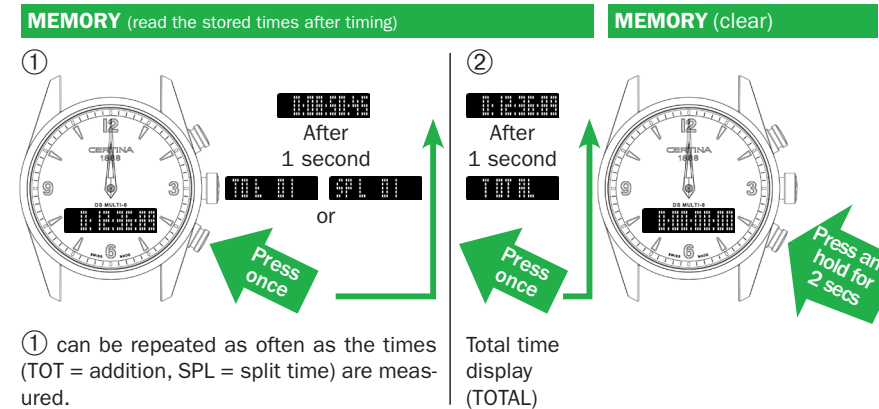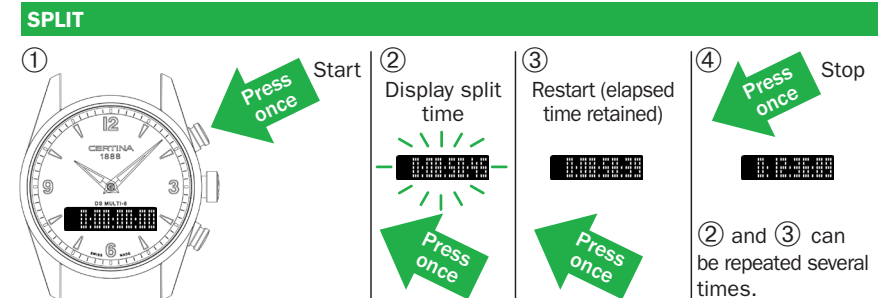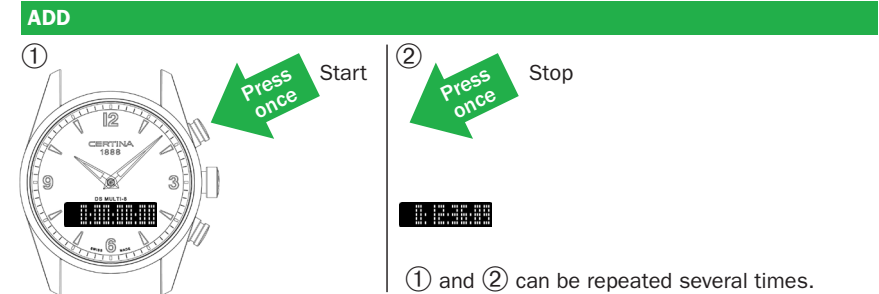

## LAP CHRONOGRAPH


A chronograph enabling lap times to be measured. Up to 20 lap times can be stored.

### LAP

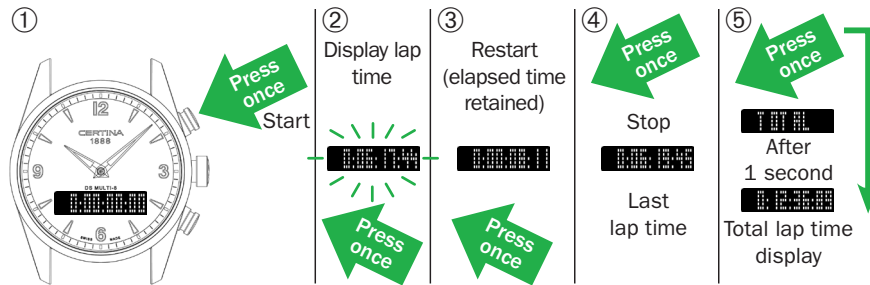

② and ③ can be repeated several times.

### MEMORY (read stored times after timing)

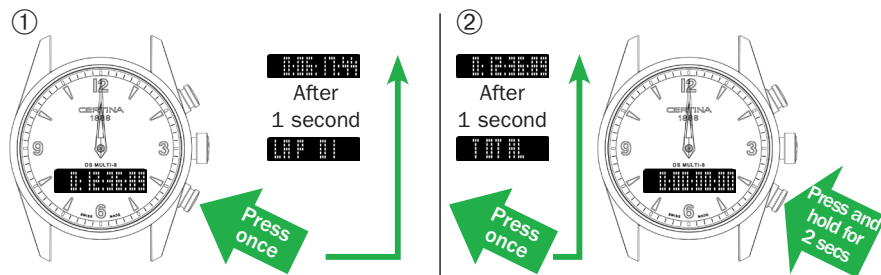


① can be repeated as often as the times (LAP = lap time) were measured.

### MEMORY (clear)



## TIMER

### USE

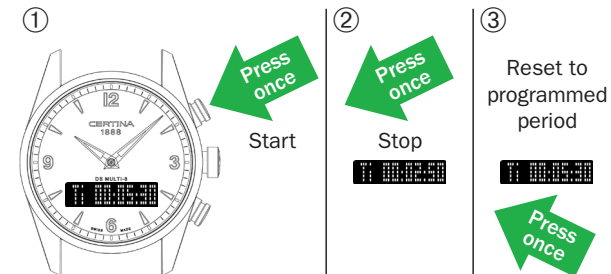

If the timer is not interrupted, the end of the countdown is indicated by an acoustic and/or vibration warning signal. The warning signal can be stopped by pressing any of the push-buttons.

### SETTING

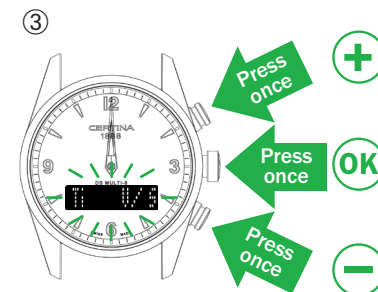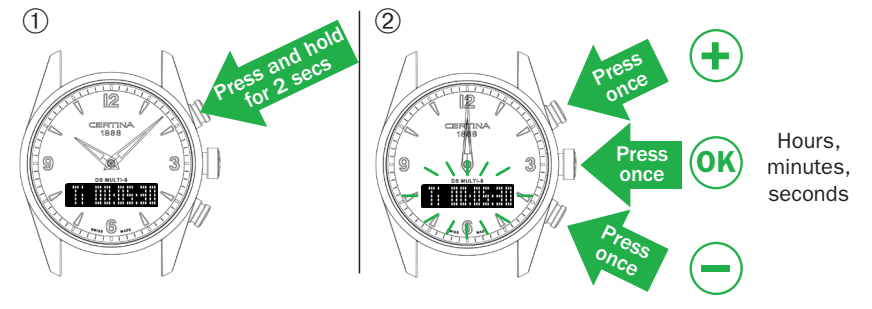

Warning type:

V/S = Vibrating and acoustic  
V = Vibrating  
S = Acoustic

## ALARM A1 (T1) & A2 (T2)

2 alarms are available. They are used and set in the same way.

**USE**

Alarm status:  
ON = Active  
OF = Inactive

**am/pm DISPLAY**

am: [am/pm]  
pm: [am/pm]

The alarm uses an acoustic and/or vibration warning signal. The warning signal can be stopped by pressing any of the push-buttons.

Only in 12 hour mode (am/pm). Indicates whether the alarm is set to am (06.00) or pm (18.00).

**SETTING**

①

②

Hours, minutes

③

Warning type:  
V/S = Vibrating and acoustic  
V = Vibrating  
S = Acoustic

## SET

The following parameters must be set as required.

**SETTINGS ACTIVATION AND PARAMETER SELECTION**

①

② [Sound] Sound  
③ [Language] Language  
④ [Date hand format] Date hand format  
⑤ [Time hand format] Time hand format  
⑥ [First weekday] First weekday  
⑦ [First calendar week] First calendar week  
⑧ [Hand synchronisation] Hand synchronisation  
⑨ [Watch sleep mode] Watch sleep mode

Press once      Press twice

**SOUND (does not affect the alarm or timer)**

②

Acoustic confirmation by pressing the push-button:  
ON = with confirmation  
OF = no confirmation


**LANGUAGE (for displaying the weekday and calendar week)**

③

Language:  
E = English  
D = German  
F = French  
S = Spanish  
P = Portuguese  
I = Italian

SET  


**DATE HAND FORMAT**

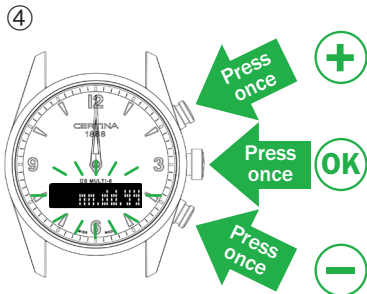

Date hand format:

dd.mm.yy = day.month.year  
mm-dd-yy = month-day-year


**TIME HAND FORMAT**

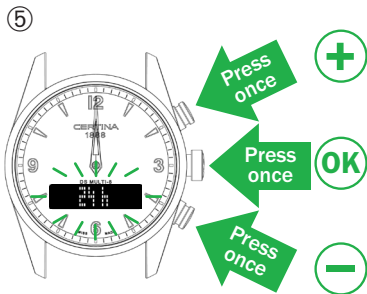

Time hand format

24 hr = 24 hour format  
12 hr = 12 hour format

**START OF WEEK (first weekday)**

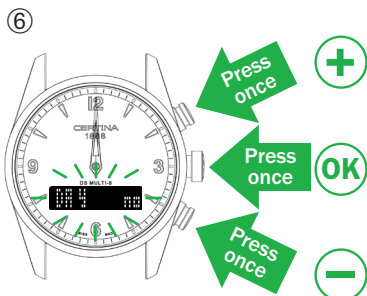


First weekday:

no = Monday  
SA = Saturday  
SU = Sunday

SET  


**FIRST CALENDAR WEEK OF THE YEAR**

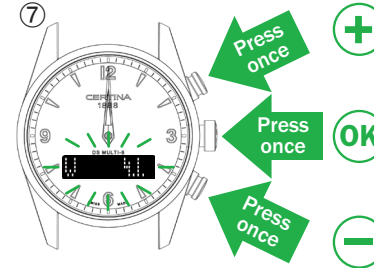


First calendar week of the year:

FULL = First full week of the year  
1.1. = The week from 1.1.  
4.1. = first week with the majority of its days in the year (DIN 1355/ISO 8601: week with the first Thursday, i.e 4.1.)

**HAND SYNCHRONISATION**

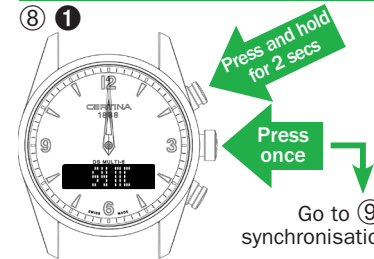


Synchronisation is necessary if the hands are not set to midday (12.00) during the setting operation, or if the same time is not shown by the hands and the digital display when the same time zone (e.g T1) is displayed simultaneously.

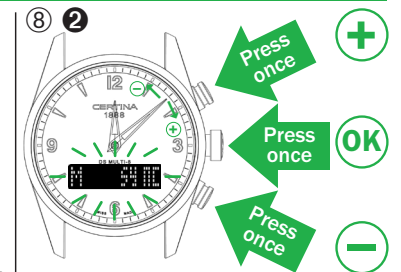


Minute hand to be moved towards 12:00:

+ → Clockwise direction  
- → Anticlockwise direction

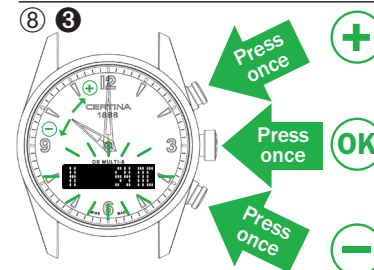

Hour hand to be moved towards 12:00:

+ → Clockwise direction  
- → Anticlockwise direction


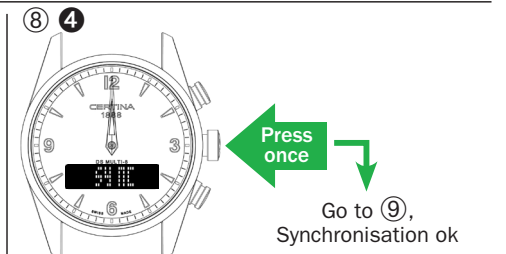


If the hand is still not at 12:00, repeat the procedure from 8 1.

SET **SET**

If the watch has not been worn for some time, we recommend setting the watch to sleep mode. This saves energy and prolongs the battery life.

## SLEEP (sleep mode)

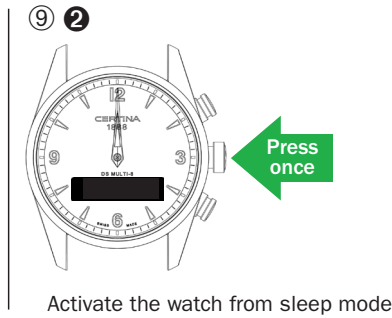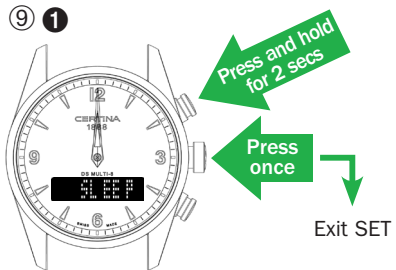

## Care and maintenance

We advise you to clean your watch regularly (with the exception of the leather strap) using a soft cloth and warm soapy water. After immersion in salty water, rinse your watch in fresh water and leave it to dry completely.

Do not leave the watch anywhere where it might be exposed to major fluctuations in temperature or humidity, in the sunlight or near strong magnetic fields.

We recommend that you have your watch checked every 3 to 4 years by your approved CERTINA® retailer or agent. For repair and servicing work, always contact an approved CERTINA® retailer or agent. This is the only way to benefit from the highest standards of service and ensure your watch guarantee remains in force.

You will find information concerning the guarantee in the booklet entitled "International Warranty Service Centers".